Process Valve

Series VNB

2 Port Valve For Flow Control

A wide variety of Cylinder actuation by applicable fluids

Proper selection with body and sealing materials permits application with a wide variety of fluids such as air, water, oil, gas and vacuum.

external pilot air

Wide variations

N.C., N.O., C.O., types are available. Screw-in type (6A to 50A) and the flange (32F to 50F) are standardized.



External pilot solenoid Air operated

Selection Procedure

Applicable fluids

- Refer to "Table (1)" to check that the desired fluid is applicable.
- Select the body and sealing materials, depending on the fluid.

Flow characteristics (Air, Water)

- To find the flow rate of air or water, refer to the table of flow rate characteristics on page 10 to 16. Use the flow rate calculation equation to find the exact answer. Although the flow rate is the same, the operating pressure differs according to the valve size. Therefore, select the proper valve size from applicable valves.
- Refer to "Table (2)" to select the port size of the threaded type (6A to 50A) and flanges (32F to 50F).


Construction

Select the air operated or external pilot solenoid styles. Valves come in N.C. (normally closed), N.O. (normally open), C.O. (double acting), and N.C. 1 MPa (normally closed) types. Select the proper one according to the operating conditions.



 Select the AC/DC power source and choose the electrical entry according to "Table (3)".

Table (1) Applicable Fluids Check List

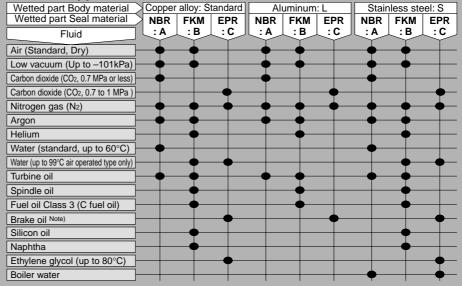

⚠ Caution

Note 1) When fluid permits application of multiple body and sealing materials, select the most suitable one according to the ambient environment (FKM or EPR seal material for high temperature) and other conditions (corrosion resistance and viscosity), etc.

Note 2) Test fluids to see if it will wash out cleaning liquid such as grease.

Note 3) Some brake oils are not allowed.

Table (2) Combinations between Valve Size and Port Size


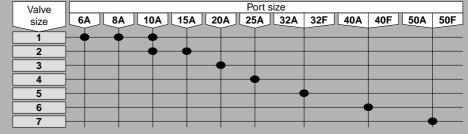


Table (3) Combinations between Electrical Entry and Light/Surge Voltage Suppressor



365

VNA VNB

SGC VNC

VNH

VND


VCC

Process Valve: 2 Port Valve

For Flow Control

Series VNB

How to Order

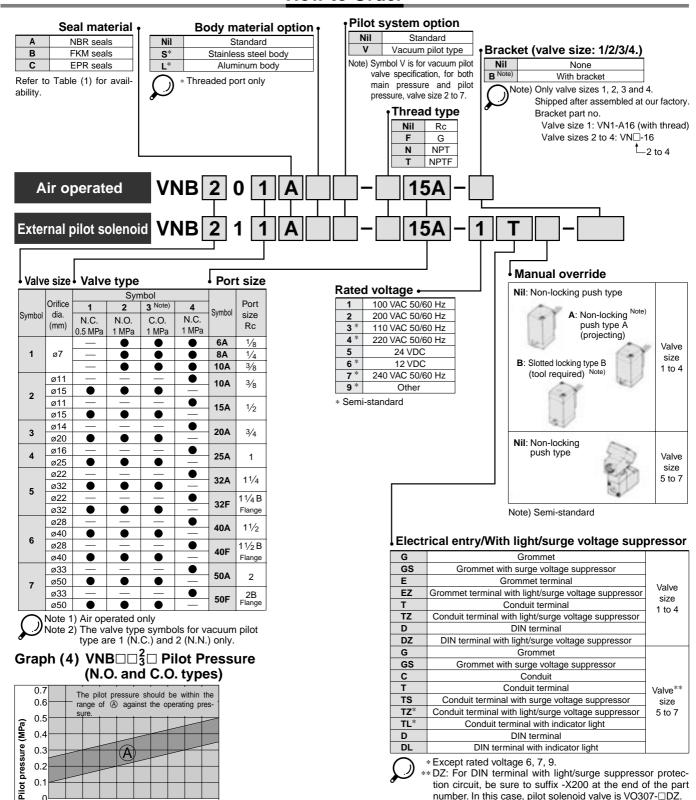

366

0.2 0.3 0.4 0.5 0.6 0.7 0.8 0.9 Operating pressure (MPa)

number. In this case, pilot solenoid valve is VO307-DZ.



JIS Symbol

-			
Valve	N.C.	N.O.	C.O.
Type type	Normally closed	Normally open	Double acting
	VNB□04	VNB□02	VNB□03
Air operated	12 (P1) 1 + 2 (A) \(\infty\)(B)	10 (P2) 1 2 (A) \gtrsim (B)	12 (P1) 1 + 2 (A) (B) 10(P2)
	VNB□1¼	VNB□12	
External pilot solenoid	12 (P1) 1 2 (A) (B)	12 (P1) 1 (A) (B)	

Note) To maintain vacuum, maintain vacuum in Port 1 (A).

Option Specifications Vacuum pilot valve VNB□□□□V

(Valve size 2 to 7)

It is used when the valve is to be operated by the main vacuum in the absence of pressurized

Specifications (Vacuum pilot type)

Fluid	Vacuum
Operating pressure range	-101 kPa to Atmospheric pressure
Pilot pressure range	–101 to – 47.9 kPa

JIS Symbol (Vacuum pilot type)

Valve	N.C.	N.O.
Type	Normally closed	Normally open
	VNB□01□V	VNB□02□V
Air operated	10 (P2) 1 + 2 (A) < (B)	12 (P1) 1 (A) 2 (B)
	VNB□11□V	VNB□12□V
External pilot solenoid	12 (P1) 1 + 2 (A) (B)	12 (P1) 1 H 2 (A) (B)

Model

	.	Orifice	Flo	w cha	Mass (kg)					
Model	Port size	dia.	Measure	d by a	air	Measured by water	Wass (kg)			
	Rc	ø (mm)	C [dm ³ /(bar·sec)]	b	Cv	Av x 10 ⁻⁶ m ²	Air operated	External pilot solenoid		
VNB1□□□-6A	1/8		3.3	0.29	0.80	25				
VNB1□□□-8A	1/4	7	4.6	0.17	1.0	29	0.3	0.4		
VNB1□□□-10A			4.7	0.18	1.1	31				
VNB2□4□-10A	3/8	11	9.6	0.40	2.6	71				
VNB2□□□-10A		15	17	0.32	4.0	110	0.6	0.7		
VNB2□4□-15A	1/2	11	9.6	0.40	2.6	76	0.6	0.7		
VNB2□□□-15A	'72	15	19	0.24	4.8	140				
VNB3□4□-20A	3/4	14	18	0.42	5.4	140	0.9	1.0		
VNB3□□-20A	94	20	35	0.13	7.4	270	0.9	1.0		

Madal		size	Orifice dia.	Flow	characteristics	Mass	s (kg)
Model	Rc	Flange ^{Note)}	ø (mm)	Cv	Effective area (mm²)	Air operated	External pilot solenoid
VNB4□4□-25A			16	7	130	1.4	1.5
VNB4□□□-25A	1	_	25	12	220	1.4	1.5
VNB5□4□-32A	11/4		22	11	210	2.5	2.6
VNB5□□□-32A	174	_	32	18	320	2.5	2.0
VNB5□4□-32F		00	22	11	210	5.7	5.8
VNB5□□□-32F	_	32	32	18	320	5.7	5.6
VNB6□4□-40A	11/2		28	19	330	4.1	4.2
VNB6□□□-40A	172	_	40	28	500	4.1	4.2
VNB6□4□-40F		40	28	19	330	7.7	7.8
VNB6□□□-40F	-	40	40	28	500	7.7	7.0
VNB7□4□-50A	0		33	29	520	6.3	6.4
VNB7□□□-50A	2	_	50	43	770	0.5	0.4
VNB7□4□-50F		50	33	29	520	11.4	11.5
VNB7□□□-50F	_	50	50	43	770	11.4	11.5



Note) The flange should be JIS B 2210 10K (ordinary style) or its equivalent.

Specifications

Opcomoditi									
Fluid			Water/Oil/Air/Vacuum, etc.						
Fi	VNB□	□□A, VNB□1□B	−5 to 60°C Note 1)						
Fluid	VAID	по п	-5 to 99°C Note 1)						
temperature	VNB	JU∐ē	(Water, Oil etc. Air Operated only)						
Ambient tempe	rature)	-5 to 50°C Note 1) (Air operated type: 60°C)						
Proof pressure	!		1.5 MPa						
Applicable Note 4)	VNE	B1_	Low vacuum to 0.5 MPa						
pressure range	VNE		Low vacuum to 1 MPa						
		VNB□□4□	0.25 to 0.7 MPa						
Futannal milat	Pressure	VNB□□3□	0.1 + 0.25 x (Operating pressure) to						
External pilot air		VINDUU3U	0.25 + 0.25 x (Operating pressure) MPa Note 3) Refer to "Graph (1)" on page 366.						
all	L	ubrication	Not required (Use turbine oil Class 1 ISO VG32, if lubricated. Note 2)						
	Te	mperature	−5 to 50°C (Air operated type: 60°C)						
Mounting orien	tation		Unrestricted Note 5)						



- Note 1) No freezing
- Note 2) Lubrication is not allowed in the case of seal material EPR.
- Note 3) Adjust the operating pressure to 0.1 MPa for low vacuum.
- Note 4) The pressure differential between Port 1 (A) and 2(B) must not exceed the maximum operating pressure.
- Note 5) For external pilot solenoid, it is recommended that the pilot solenoid valve be oriented either vertically upward or horizontally.

 Note 6) Non-lubricant specifications are not available for this product.

Pilot Solenoid Valve Specifications

			.							
Port size		•	6A to 25A	32A to 50A, 32F to 50F						
Pilot solenoid v	alve		SF4-□□□-23	VO301□-00□□□						
Electrical entry			Grommet, Grommet terminal, Conduit terminal, DIN terminal	Grommet, Conduit, DIN terminal, Other (Option)						
Coil rated	AC (50/60 Hz)	100 V, 200 V, othe	er voltage (Option)						
voltage (V)		DC	24 V, other voltage (Option)							
Allowable volta	ge fluct	uation	-15% to +10% of rated voltage							
Coil insulation	type		Class B or equivalent (130°C)							
Temperature ris	se		35°C or less (when rated voltage is applied.)	70°C or less (when rated voltage is applied.)						
Apparent	AC	Inrush	5.6 VA (50 Hz), 5.0 VA (60 Hz)	12 VA (50 Hz), 10.5 VA (60 Hz)						
power	AC	Holding	3.4 VA (50 Hz), 2.3 VA (60 Hz)	7.5 VA (50 Hz), 6 VA (60 Hz)						
Power consumption		DC	1.8 W (without light), 2W (with light)	4.8 W (without light), 5 W (with light)						
Manual overrid	е		Non-locking push type Other (Option)	Non-locking push type						

Note 1) For "How to Order" pilot solenoid valves, refer to page 368.



VNA

VNB


SGC

VNC VNH

VND

VCC

Construction

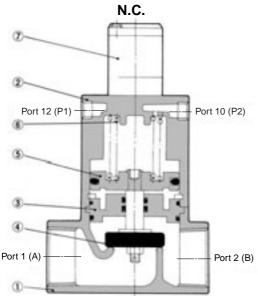

No.	Description	Material	Note
1	Body	Bronze*	Clear coated
2	Cover assembly	Aluminum alloy	Platinum silver painted
3 Note)	Plate assembly	Brass*	Valve material (NBR, FKM, EPR)
4 Note)	Valve element	Valve material (NBR, FKM, EPR)	Stainless steel or brass*
5	Piston assembly	Aluminum alloy	_
6	Return spring	Piano wire	_
7	Pilot solenoid valve	_	_

Note) Parts 3 and 4 are for selection of valve composition.


FKM

EPR

material

Pilot solenoid valve

Replacement Parts

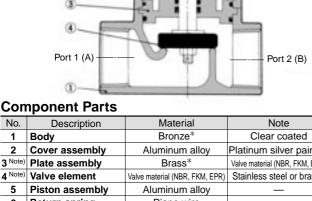

* The body option "S" is stainless steel, and "L" is aluminum. P2), the valve element opens, and it closes when pressurized air enters the port P2 (exhaust from the port P1). Part no. VNB1 VNB2 VNB3 VNB4 VNB6 VNB6□ 4 □ VNB7□ 4 □ No Description VNB7 -6A, 8A, 10A -10A, 15A -40A, 40F -20A -25A -32A, 32F -32A, 32F -40A, -40F -50A, 50F -50A, 50F NBR VN2-A3BA VN3-A3BA VN4-A3BA VN5-A3BA VN5-A3BA VN6-A3BA VN6-A3BA VN7-A3BA VN7-A3BA Plate Seal VN3-A3BB FKM VN2-A3BB VN4-A3BB VN5-A3BB VN5-A3BB VN6-A3BB VN6-A3BB VN7-A3BB VN7-A3BB assembly material VN6-A3BC **EPR** VN2-A3BC VN3-A3BC VN4-A3BC VN5-A3BC VN5-A3BC VN6-A3BC VN7-A3BC VN7-A3BC Refer to Valve element **NBR** Note 2) VN2-4BA VN3-4BA VN4-4BA VN5-A4BA VN5-A4BA-3 VN6-A4BA VN6-A4BA-3 VN7-A4BA VN7-A4BA-3 Seal 32 A to 50 A come in valve element assembly VN2-4BB VN4-4BB

VN4-4BC



Note 1) In the case of body options "S" and "L", the materials of the part nos. ③ and ④ are as follows: (Example): VN1-A3B□A

VN3-4BB

VN2-4BC VN3-4BC

SF4-□□□-23 (Refer to the table below.)

Conduit terminal with light/surge voltage suppressor

DIN terminal

DZ DIN terminal with light/surge voltage suppressor


However all brackets of valve element VNB 1 to 4 are made of stainless steel. (No need to add options "S" and "L".) L: Aluminum, S: Stainless steel Note 2) Please request a factory repair.

VN5-A4BB

VN5-A4BC

VN5-A4BB-3


How to Order Pilot Solenoid Valves

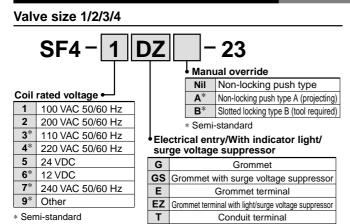

TZ

D

N.O.



* C.O. type does not have a return spring 6.

Working Principle (Vacuum pilot type is excluded)

VNB□0¼□, □1¼□ (N.C.)

When the pilot solenoid valve 7 is not energized (or when air is exhausted from the port P1 of the air operated type), the valve element linked to the piston 5 is closed by the return spring 6.

When valve opens

When the pilot solenoid valve is energized (or when pressurized air enters through the port P1 of the air operated style), the pilot air that has entered under the piston moves upward to open the valve element.

When the power to the pilot solenoid valve is turned off (or when fluid is exhausted from the port P1 of the air operated style), the pilot air under the piston is exhausted, and the return spring closes the valve element.

VNB□02□, □12□ (N.O.)
In contrast with the N.C., when the power to the pilot solenoid valve is turned off (or when air is exhausted from the port P2 of the air operated style), the valve is held open by the return spring. When the pilot solenoid valve is energized (or when pressurized air enters through the port P2 of the air operated style), the valve element closes.

VNB□03□ (C.O.)


The valve element for the C.O. type, which has no return spring, is in an arbitrary position when air is exhausted through the ports P1 and P2. When pressurized air enters the port P1 (exhaust from the port

VN6-A4BB VN6-A4BB-3

VO301□-00□□□ (Refer to the table below.)

VN5-A4BC-3 VN6-A4BC VN6-A4BC-3 VN7-A4BC VN7-A4BC-3


Valve size 5/6/7 and vacuum pilot type VO301

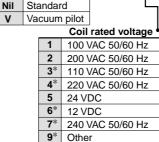

Body option

Semi-standard

Accessory Function plate (D sealing, with thread) : DXT060-32-4A

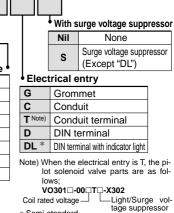


* Semi-standard


VN7-A4BB VN7-A4BB-3



Port size: 6A, 8A, 10A

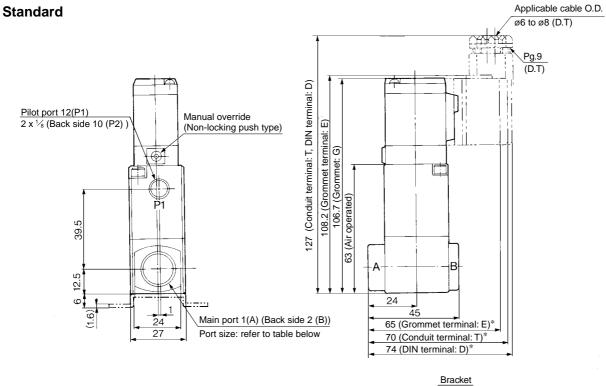

Model	Main port 1(A), 2(B)
VNB1□□□-6A	1/8
VNB1□□□-8A	1/4
VNB1□□□-10A	3/8

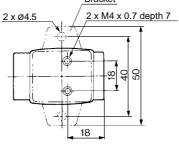



 \ast In the case of "EZ" or "TZ", the length is longer by 10 mm. For "DZ", the length is longer by 17 mm.

VNA

VNB

SGC

VNC


VND

VCC




Series VNB

Port size: 10A, 15A, 20A, 25A

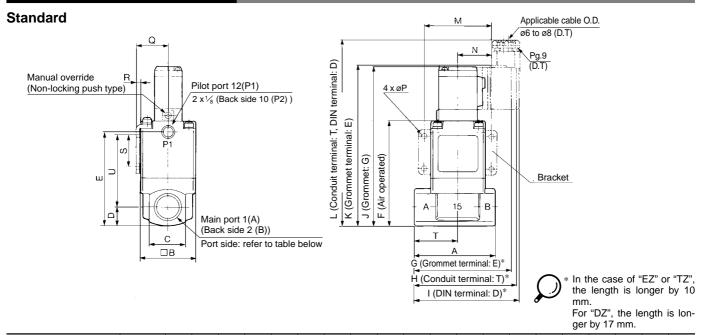


	Model	Main port 1(A), 2(B)	Α	В	С	D	E	F	G	н	ı	J	K	L	M	N	Р	Q	R	s	Т	U
Ì	VNB2□□□-10A	3/8	63	42	28	11	72.5	80.5	75	80	84.5	124	125.5	144.5	52	26	4.5	24.3	2.3	25	34	55
	VNB2□□□-15A	1/2	03	42	20	14	12.5	60.5	75	80	04.5	124	120.0	144.5	52	20	4.5	24.3	2.5	25	34	55
	VNB3□□□-20A	3/4	80	50	35	17.5	84	92	84	89	93.5	135.5	137	156	62	31	5.5	28.3	2.3	30	43	60.5
	VNB4□□□-25A	1	90	60	40	20	100	108	90	95	99.5	151.5	153	172	72	36	6.5	33.3	2.3	35	49	73

Port size: 10A, 15A, 20A, 25A

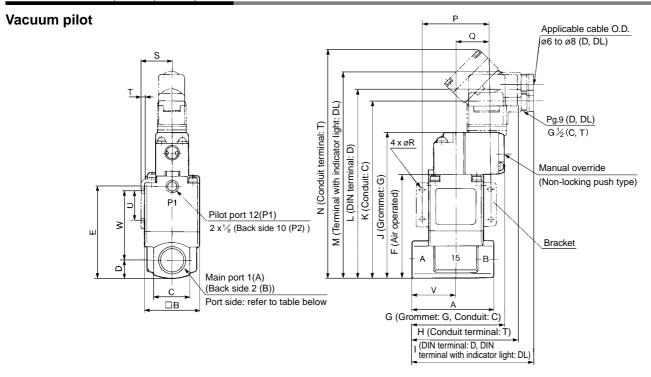


Model	Main port 1(A), 2(B)	Α	В	С	D	E	F	G	Н	ı	J	K	L	M	N	Р	Q	R	S	T	U	٧	w
VNB2□□□V-10A	3/8	63	42	28	14	72.5	80.5	75	87	97	114	126.5	170.5	173.5	180.5	52	26	4.5	24.3	2.3	25	34	55
VNB2□□□V-15A	1/2	03	42	20	14	12.5	00.5	73	01	31	114	120.5	170.5	173.3	100.5	32	20	4.5	24.5	2.5	23	34	33
VNB3□□□V-20A	3/4	80	50	35	17.5	84	92	80	92	102	125.5	138	182	185	192	62	31	5.5	28.3	2.3	30	43	60.5
VNB4□□□V-25A	1	90	60	40	20	100	108	81	93	103	141.5	154	198	201	208	72	36	6.5	33.3	2.3	35	49	73

Port size: 32A, 40A, 50A

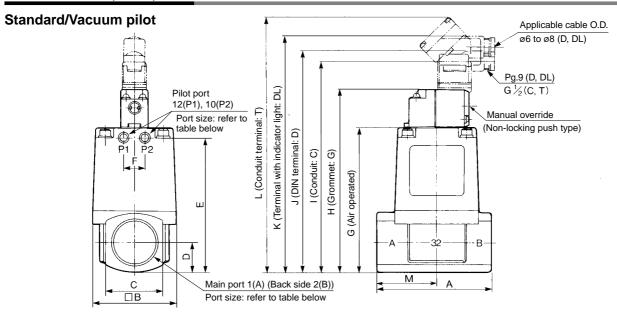

Model	Main port 1(A), 2(B)	Pilot port 12(P1), 10(P2)	- Δ	В	С	D	E	F	G	Н	ı	J	K	L	М
VNB5□□□□-32A	1 1/4	1/8	105	77	53	26.5	120.5	20	129.5	163	175.5	218.5	223	229.5	55
VNB6□□□□-40A	1 1/2	1/4	120	96	60	30	137	24	147	180.5	193	236	240.5	247	63
VNB7□□□□-50A	2	1/4	140	113	74	37	160	24	170	203.5	216	259	263.5	270	74

Port size: Flange: 32F, 40F, 50F

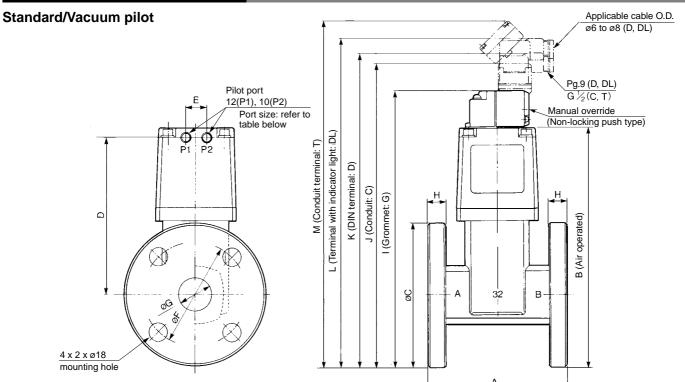

Model	Applicable flange 1(A), 2(B)	Pilot port 12(P1), 10(P2)	Α	В	С	D	E	F	G	Н	I	J	К	L	М
VNB5□□□□-32F	32	1/8	130	210.5	135	134	20	100	36	12	244	256.5	299.5	304	310.5
VNB6□□□□-40F	40	1/4	150	226	140	146	24	105	42	12	259.5	272	315	319.5	326
VNB7□□□□-50F	50	1/4	180	250	155	162.5	24	120	54	14	283.5	296	339	343.5	350

VNA

VNB SGC

VNC

VNH

VND

VCC

371



Series VNB Specific Product Precautions

Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions, and pages 17 to 19 for 2 Port Solenoid Valves for Fluid Control Precautions.

External Pilot

Pilot port P1 and P2 piping

Please arrange P1 and P2 piping as follows according to the model.

Standard

Port	VNB□01□	VNB□02□	VNB□03□	VNB□1 ¹ ₄ □		
(P1) External pilot		Bleed port	External pilot	External pilot		
10 (P2)	Bleed port	External pilot	External pilot	Pilot exhaust		

Vacuum pilot

Port	VNB□01□V	VNB□02□V	VNB□1½□V External pilot Pilot exhaust		
12 (P1)	Bleed port	External pilot			
10 (P2)	External pilot	Bleed port			

Installing a silencer to the exhaust port and the bleed port is recommended for noise reduction and for dust entry prevention.

Piping

When high temperature fluids are used, use fittings and tube with heat resistant features.

(Self-align fittings, Teflon® tubing, Copper piping, etc.)

Mounting Direction of Pilot Solenoid Valve

With external pilot solenoids, the pilot solenoid valves are not splash proof specifications, and so care must be taken not to get fluid on oneself such as when performing maintenance.

Direction of mounting

When replacing a valve, if an external pilot solenoid valve is mounted in the wrong direction, it may malfunction or leak air.

Vacuum Pilot

△ Caution

When using the VNB \square_1^0 1 \square V N.C. vacuum pilot, maintain the specified pilot pressure by providing a tank with an appropriate capacity or by acquiring the pilot pressure from an area near the vacuum pump.

